


# Steps in proper window flashing

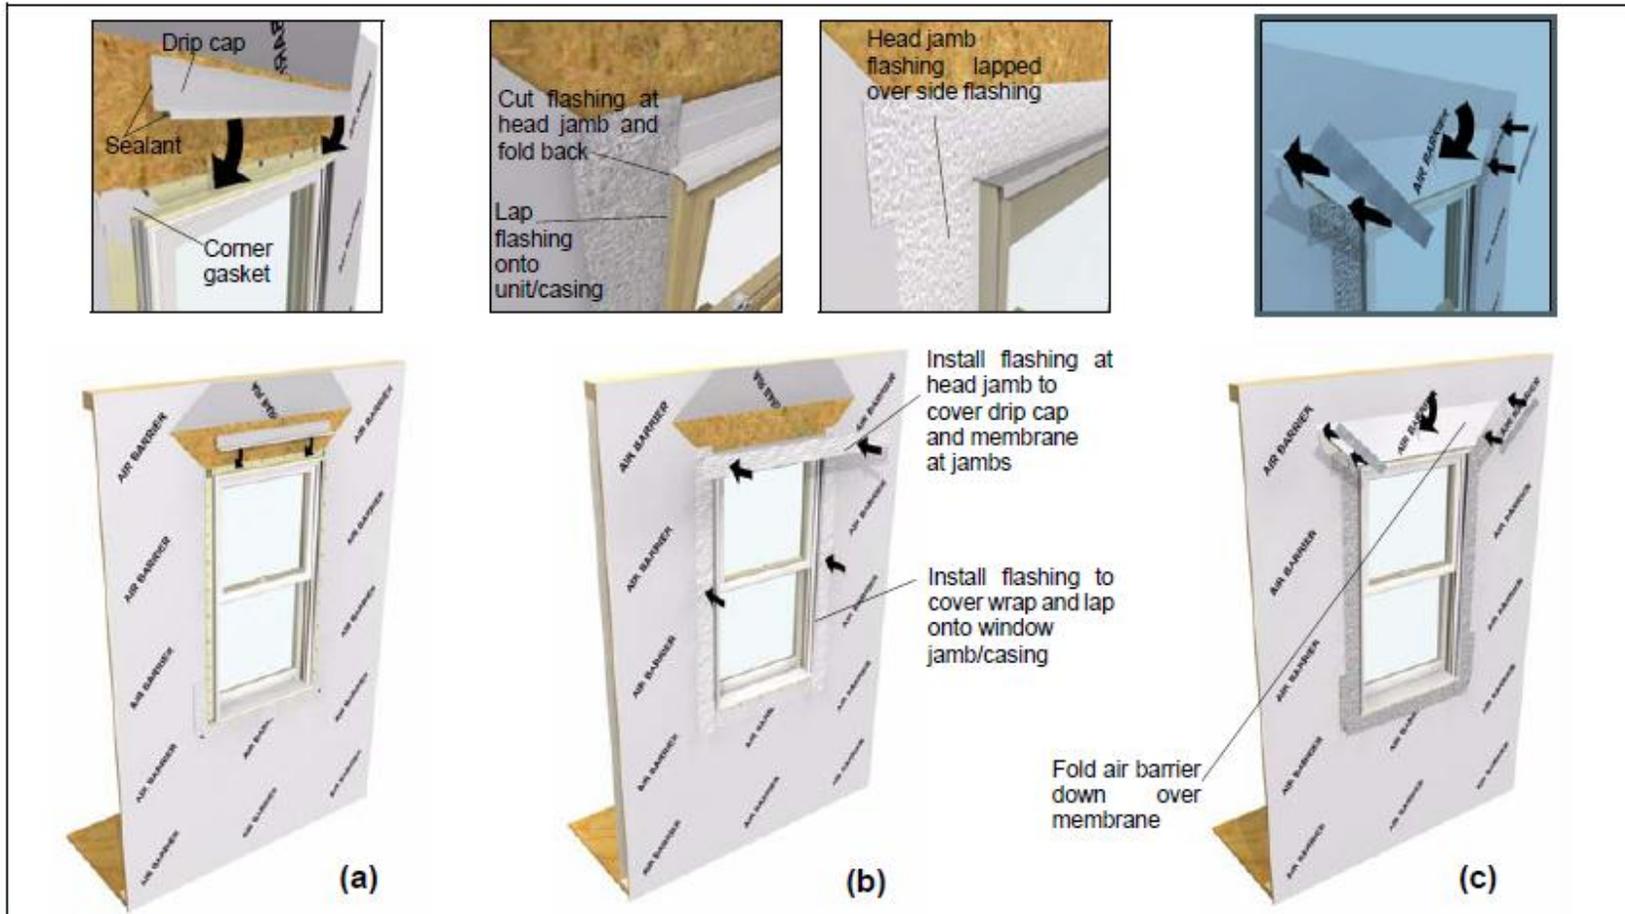

To seal the top of the window from water, the air barrier must be installed over the top of the drip cap and top window flange. The air barrier can be folded into the rough opening on the sides and the bottom of the window. Also, do not forget to seal the lower sides and bottom of the rough opening with, what is called a flashing pan. The window U-Value must be .31 or lower to save energy.